



## INSTRUCTIONS FOR USE

1. Wash the cookie cutters before the first use
2. Roll out the dough and press the cookie cutters to give the desired shape
3. Do not put them in the oven
4. Do not wash them in the dishwasher
5. For a longer life of the cookie cutters, please wipe them off carefully after washing

## TECHNICAL DATA

Material

Tinplate

## USES AND PROHIBITIONS






### INSTRUCTIONS FOR USE

1. Wash the mould before the first use.
2. Slightly grease inside surface with oil, butter or margarine before baking.
3. Use only in traditional ovens (no microwave).
4. Please do not exceed 250° C.
5. The item is suitable to all types of washing, however to ensure a longer life of the product we do not recommend to wash it in the dishwasher. Moreover, we recommend drying the item off carefully after each washing.

### TECHNICAL DATA

**Material** Stainless steel

### IDEAS FOR THE USE

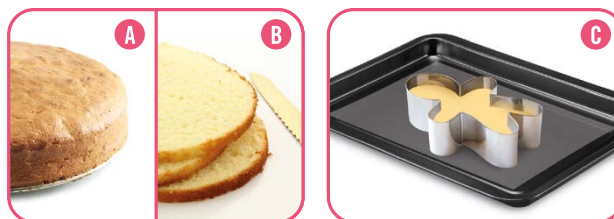

- A - Make the cake directly.
- B - Cut the sponge cake discs and stuff.
- C - Pour the mixture directly into the mold.

### USES AND PROHIBITIONS

